



Sony Cybershot DSC-T5 Button Replacement

This guide will instruct the reader how to replace the buttons to the right of the main screen for the Sony Cybershot DSC-T5. These buttons include: menu, zoom, and delete among others.

Written By: Jason Vaccaro





TOOLS:

 
 
- [Phillips #000 Screwdriver](#) (1)



PARTS:


- [Sony Cybershot DSC-T5 button layout](#) (1)

Step 1 — Button

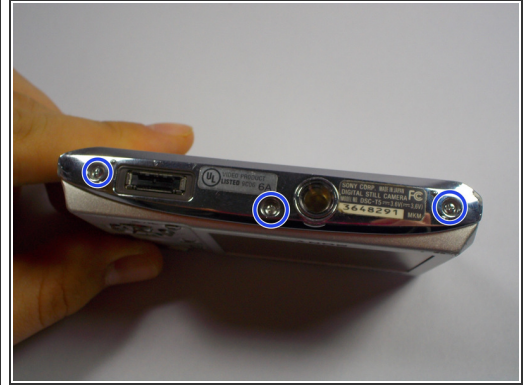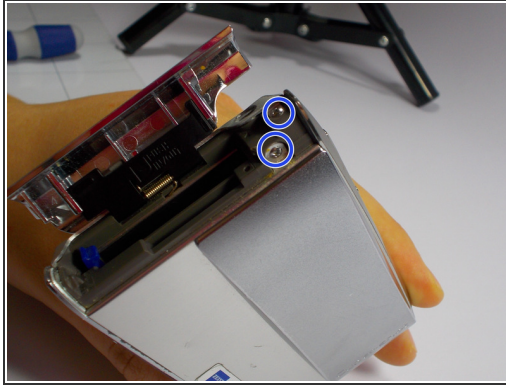

- Remove all 6 exterior screws from the casing.

 Step 2

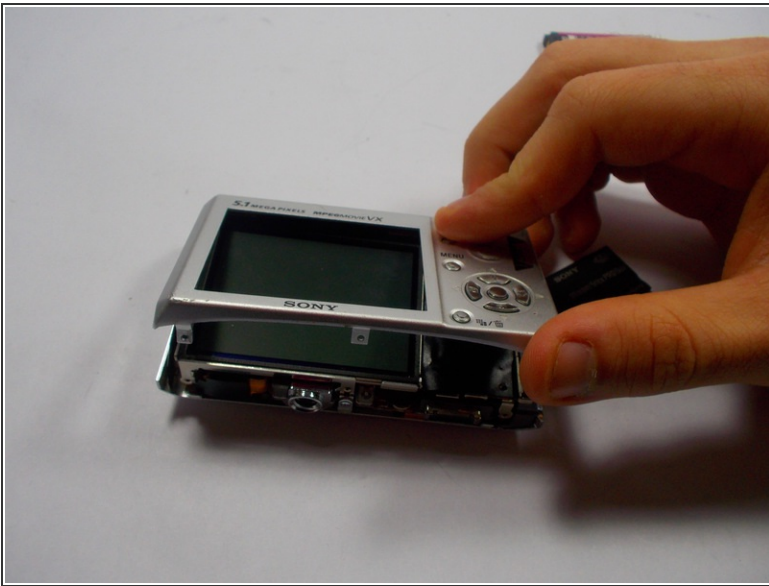

- Remove the front casing by carefully pulling it off from the camera.

Step 3



- Start at one end of the button layout and carefully pull the buttons off the casing.
⚠ Note that there is some adhesive on the buttons.ne.
- Insert a new button layout and re-assemble device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 05:22:33 AM.